



Instruction manual tumble dryer

1. Put laundry in the washing drum
2. Put the laundry detergent in the detergent dispenser or directly in the washing drum (if it is a tab)
3. Close the door firmly
4. Insert the certain credit with € 0,50 / € 1,- / € 2,- coins (€ 0,50 equals 60 minutes)
5. Minimum credit = € 2,- (equals 240 minutes)
6. Select program with the program button. Programs:

program	function	degree	duration in minutes	costs
Koch- / Buntwäsche	Wash (boil wash colourdes)	40°	140	€ 2,-
Buntwäsche Eco	Wash (multi colored-wash eco)	60°	226	€ 2,-
Pflegeleicht	Wash (easy care)	40°	125	€ 2,-
Wolle (Handwäsche)	Wash (wool)	40°	62	€ 2,-
Express (Super Express 14')	Wash (express)	30°	28	€ 2,-
Daunen	Wash (down)	40°	101	€ 2,-
Extra Programme	Wash (extra program)	40°	126	€ 2,-
Hemden	Wash (shirts)	60°	118	€ 2,-
Wash & Wear	Wash	30°	40	€ 2,-
5kg Wash & Dry	Wash & Dry	60°	261	€ 2,50
Hygiene + Wash & Dry	Wash & Dry	60°	321	€ 3,-
Pflegeleicht Trocknen	Dry (easy care dry)		126	€ 2,-
Koch- / Buntwäsche trocknen	Dry (boil wash colourdes dry)		199	€ 2,-

7. Press „Start/Pause“ button to start program
8. If the program is finished, open door and remove laundry
9. In the event the door does not open after the program has been completed and the deposited credit has been used up, simply press the "open door" button again; the door can then be opened within the next 30 seconds

Please note that there is always enough credit for the appropriate washing / drying process. Otherwise the program aborts early and cannot be completed!